

Upgrading the Firmware (Chap 4 of user manual)

The firmware is the operating system (OS) installed on the device. Firmware upgrades can bring new features, improvements and bug fixes.

Download the latest firmware from our official website.

Step 1: Prepare the USB key or Memory Card

You will need a USB Key or Memory Card for firmware upgrade. Make sure there is no files in the USB /Card device. Copy the file "UPG956M.AP" to the root directory of the device. No change the file name.

Step 2: Power on the player and connect it with TV.

Step 3: Connect the USB key or Memory Card

Plug it and select the right device on device selection.

Step 4: Enter PHOTO, MUSIC, MOVIE or BROWSER in the main interface

Firmware installation will then start. You will see a short message "Upgrade flash..Erase.." on the TV screen.

Please wait for about 1 minute, and installation will be completed. Then the player will reset.

Note:

Do not turn off the power during installation;

Do not unplugged the device during installation.