

Firmware upgrade

STEP 1: Prepare the USB Pen Drive

You will need a USB Pen Drive for firmware installation. Copy «install.img » file from firmware folder to the root directory of your USB Pen Drive.

STEP 2: Connect the USB Pen Drive

Plug the USB Pen Drive into one of the USB HOST ports of player


STEP 3: Hold the POWER button

Press and hold the POWER button on the right panel, and do not loosen.

STEP 4: Connect the power cable

Plug the power cable into the DC IN jack, wait about 5 seconds or more, and then loosen your finger on the POWER button.

Firmware installation will start in about 15 seconds. If it is connected to a TV set, the similar page will appear on the TV screen.

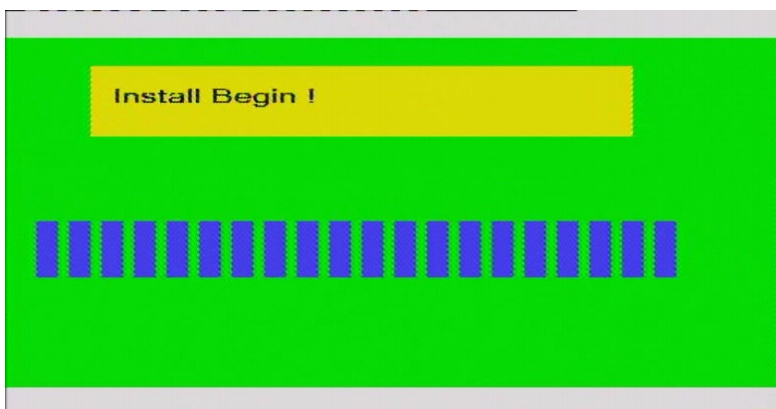

Please wait about 10 minutes, the installation will be completed.